


SLIMLINE TILE INSERT 21 (STI21)

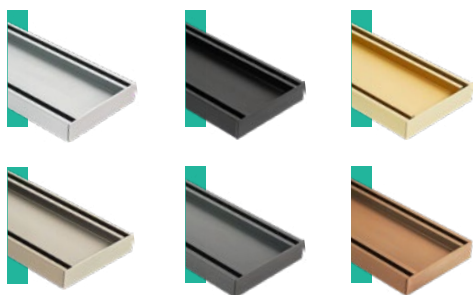


Code STI21-S-3, STI21-M-3, STI21-G-3,
STI21- BN-3, STI21-GM-3, STI21-C-3

Colours Available Silver, Midnight, Gold,
Brushed Nickel, Gunmetal,
Copper

PRODUCT SPECIFICATIONS

Length	3000mm
Width	100mm
Depth	21mm
Material	Anodised Aluminium
Weight	4.3kg

Applications	Indoor and Outdoor
Features	• Thinnest Tile Insert available • Suitable for tiles up to 10mm thick • Easy roll out feature for cleaning and maintenance • Lifetime Rustproof Warranty • UV Stable
Scope of Use	DN90 72mm and 80mm
Load Rating	Class B - Maximum Load at 10.2 tons

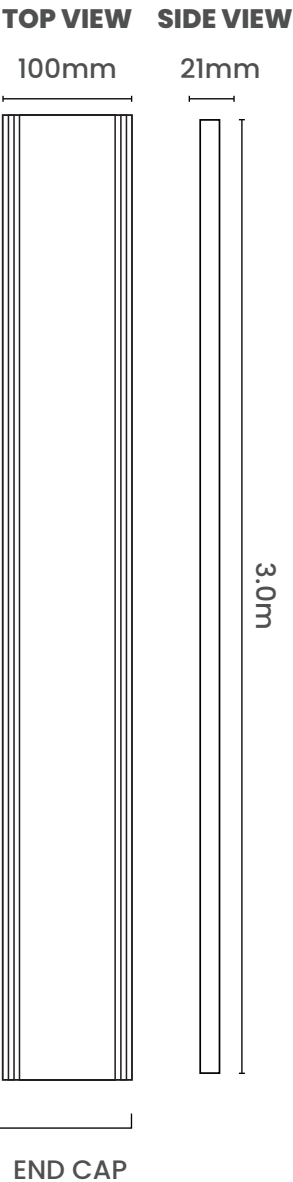

Minimum 72mm waste outlet recommended

* Total length of full grate is 3.2m, total usable length is 3.0m to allow for any wastage during the anodising process.

* Regular, gentle cleaning with soapy water is recommended. Do not use abrasive cloths or acidic chemicals on the grates.

Warranty & Care Information

www.lauxesgrates.com.au




1300 214 510



Cutting Instructions & Installation

For ease of cutting Lauxes grates, we recommend using a compound mitre saw fitted with a multi-material cutting blade 80 tooth or more. We also recommend using a Lauxes TCT hole saw to drill the hole for the waste outlet.

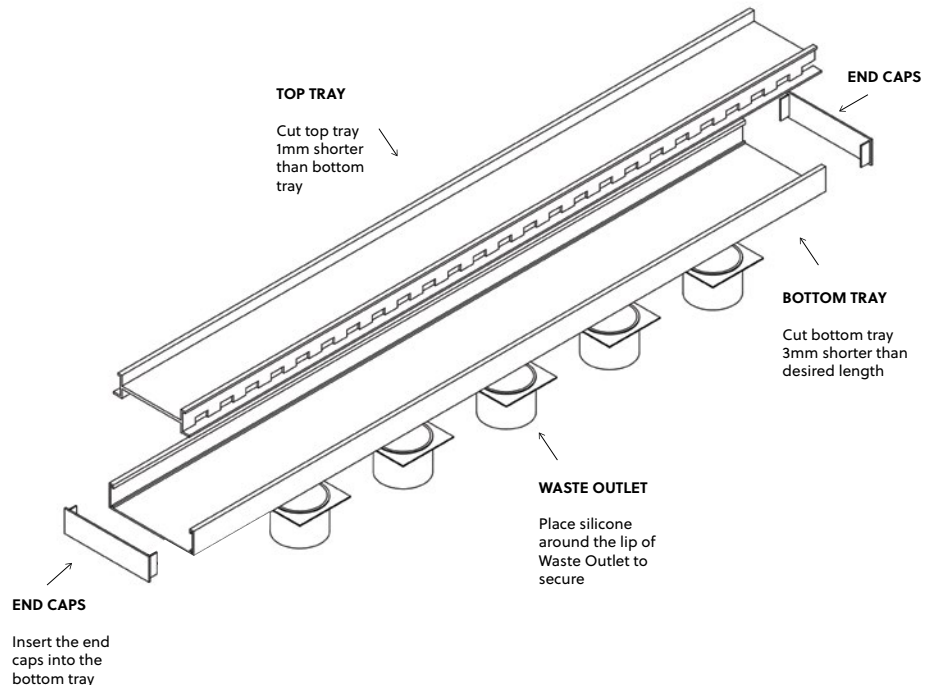

* During installation use a template to ensure the grate does not come in contact with any wet cement based products.

* When installing tile, use a neutral cure silicone.

Installation to be by a licensed plumber and in accordance with AS/NZS 3500.2.

Disclaimer: All Lauxes grates and accessories hold WaterMark Certification in accordance with WMTS - 040.

Warranty & Care Information

www.lauxesgrates.com.au

1

Cut the bottom tray 3mm shorter than desired length to allow end caps to be fitted.

2

Cut the top grate 1mm shorter than the bottom tray to allow for easy roll-in of top grate and tidy fit.

3

Using a suitable size Lauxes hole saw for your pop waste, drill out the hole at the required position to align with the waste pipe in the floor.

4

Insert the end caps into bottom tray and secure with a bead of silicone on the outside of tray.

5

Place silicone around the lip of the pop waste and secure to the underside of bottom tray at the recently drilled hole.