

STI SHOWER PACK (STISP26)

ADD-ON



Code

STISP26-S-1, STISP26-M-1,
STISP26-G-1, STISP26- BN-1,
STISP26-GM-1, STISP26-C-1

Colours Available


Silver, Midnight, Gold,
Brushed Nickel, Gunmetal,
Copper

PRODUCT SPECIFICATIONS


Length	1000mm
Add on for	Slimline Tile Insert 26
Material	Anodised Aluminium
Weight	0.92kg

Applications	Indoor and Outdoor
Features	- Suitable for tiles up to 11mm thick - Easy roll out feature for cleaning and maintenance - Anti-water tracking design - Lifetime Rustproof Warranty - UV Stable - Add on for Slimline Tile Insert 26
Load Rating	Class B – Maximum Load at 10.2 tons

ISOLATERAL VIEW

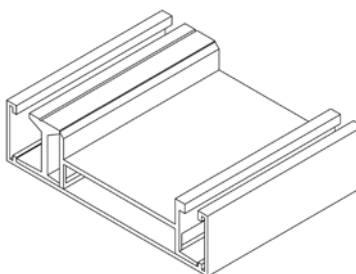

TOP VIEW SIDE VIEW

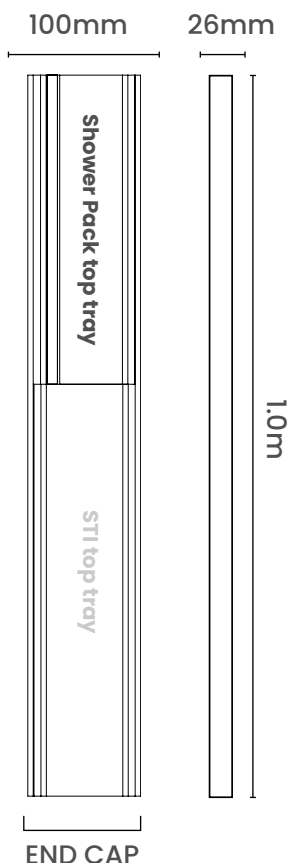

FRONT VIEW



* Regular, gentle cleaning with soapy water is recommended. Do not use abrasive cloths or acidic chemicals on the grates.

* Slimline Tile Insert 26 is purchased separately to this product.

*This product is used in conjunction with the Slimline Tile Insert 26 (STI26), and acts as a partial replacement top for this product. This product is a **TOP ONLY** and cannot be used on it's own.

Warranty & Care Information

www.lauxesgrates.com.au




1300 214 510

lauxes
GRATES

Cutting Instructions & Installation

For ease of cutting Lauxes grates, we recommend using a compound mitre saw fitted with a multi-material cutting blade 80 tooth or more. We also recommend using a Lauxes TCT hole saw to drill the hole for the waste outlet.

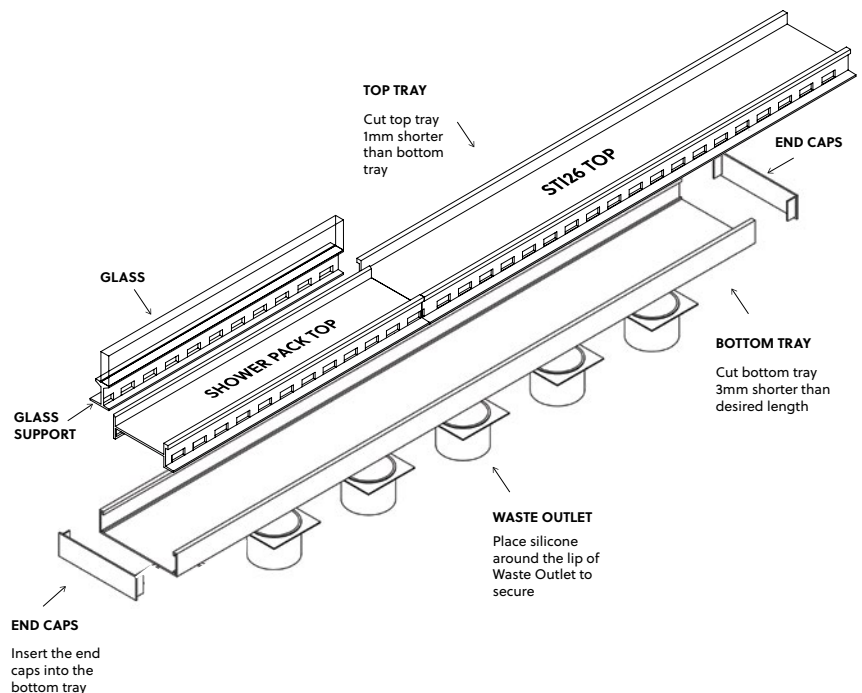

* During installation use a template to ensure the grate does not come in contact with any wet cement based products.

* When installing tile, use a neutral cure silicone.

Installation to be by a licensed plumber and in accordance with AS/NZS 3500.2.

Disclaimer: All Lauxes grates and accessories hold WaterMark Certification in accordance with WMTS - 040.

Warranty & Care Information

www.lauxesgrates.com.au

1

Determine the length of the grate by making sure the grate reaches wall to wall. Now cut 3mm shorter than desired length to allow end caps to be fitted.

2

Using a Lauxes hole saw, drill the waste hole from the underside of the tray wherever needed.

3

Fit end caps and the waste outlet using neutral-cure silicone. Clean all excess silicone away from the tray.

4

Cut the glass support and the thinner tile-insert top tray to the exact length of the shower glass.

5

Cut the remaining standard tile insert top tray 3 mm shorter than the walkway opening. (This clearance is vital for removing the tops for cleaning later).